



PLS

INSTALLATION/SOFTWARE/USAGE


Q: Question

How can I log the results from my PLS setup?

A: Answer

All of this can be done from the Advanced Configuration screen.

- A) Logging the results over a defined period of time.
- Fill in the requested period (Start & End date)
 - Choose required models
 - Click Export Now
 - Save in adequate folder

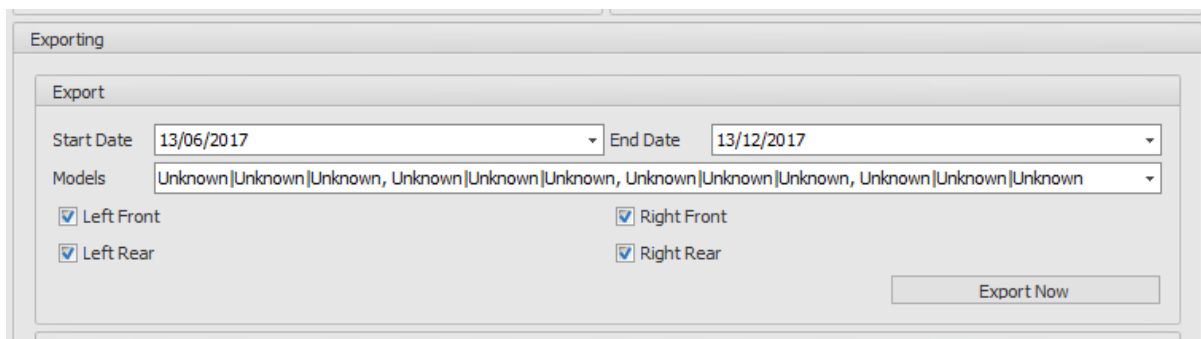

- B) Daily auto-export of the log-files.

Under the Advanced button is a Auto Export-tab.

- Ensure that the auto-export function is enabled in the software
- Fill in where the log-files are being saved
- choose appropriate Export time

