

EZSLAM

INSTALLATION/SOFTWARE/USAGE

Q: Question

How to delete the data on the first line at Metrics? (EZSlam2)

A: Answer

If you want to delete the first run, sort them from high to low, so that the number 1 is on the bottom of the table.

Normal

Type	ID ▲	Origin	Disab...	Status	Statu...	Lat
> Slam	01	Measu...	☐	OK	-	Lat
Slam	02	Measu...	☐	Notific...	! <Pul...	Lab
Slam	03	Measu...	☐	OK	-	Lab
Slam	04	Measu...	☐	Notific...	! <Pul...	Lab

Inverse Sorted by ID (where the first run appears at the bottom).

Drag a column header here to group by that column						
Type	ID ▼	Origin	Disab...	Status	Statu...	
Typical	Typ	Const...	☐	-	-	
Nominal	Nom	Impor...	☐	-	-	
Minimal	Min	Const...	☐	-	-	
Ghost	Ghs	Impor...	☐	-	-	
Fitted	Fit	Const...	☐	-	-	
Wiggle	26	Measu...	☐	OK	-	
Wiggle	25	Measu...	☐	OK	-	
Close ...	24	Measu...	☐	OK	-	

Slam	04	Measu...	☐	Notific...	!
Slam	03	Measu...	☐	OK	-
Slam	02	Measu...	☐	Notific...	!
> Slam	01	Measu...	☐	OK	-