

EZSpeed

INSTALLATION/SOFTWARE/USAGE

Q: Question

How do I replace the suction cup on EZSpeed Targets?

A: Answer

The EZSpeed target assembly is simple and lightweight. It consists of a molded plastic target triangle and a clear suction cup with a press pin in it. The suction cup can wear out over time and may need to be replaced.



To remove the suction cup from the triangle, the black press pin will need to be removed first. Side Angle Wire Cutters do a decent job of getting under the pin without scratching the triangle. The pin can be pulled out or it can also be cut if it does not need to be used again.



The suction cup can now be pulled out of the triangle and be replaced with a new one. Lay the triangle flat side down on a flat surface. Press the new suction cup into the hole where it should slightly pop into place. Rotate the cup until the tab is facing out away from the triangle in an easy to reach direction and not under the triangle.



Finally press the push pin into the back of the suction cup. It may require a decent amount of force so a small arbor press or plumbers wrench may be helpful here. Alternatively brute force can be used by placing the target, pin side down, on a table and pressing on the center of the suction cup with one or both thumbs.

