

EZSLAM

INSTALLATION/SOFTWARE/USAGE

Q: Question



What is the meaning of hinge angle and how is it applied?

A: Answer

Hinge angle is unrelated to how the system is mounted on the door. It is the angle defined between gravity and the rotation angle (hinge) of the door.

The legend text on each angle should indicate if it is:

- in (-) or out (+) board for Y
- front (-) or rear (+) for the X angle.

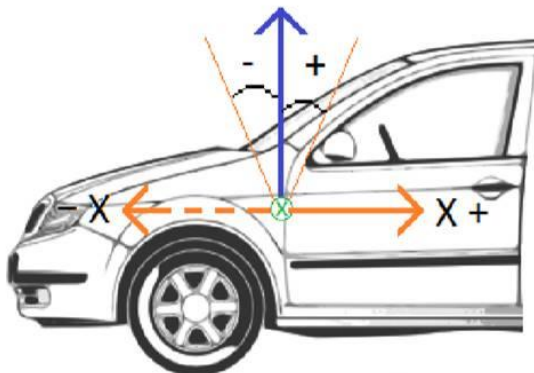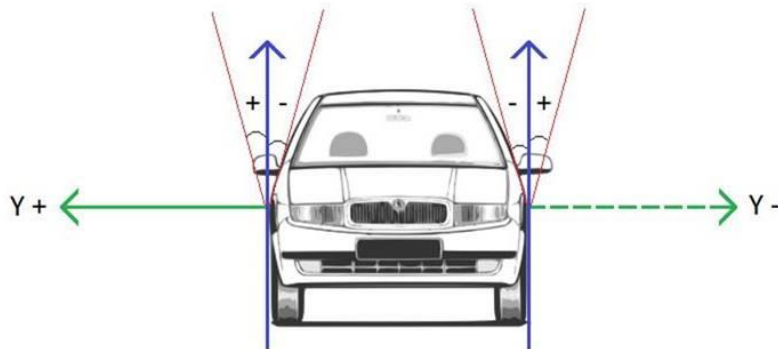



This definition is the same for EZSlam2 and EZSlamX.

The Door Rise curve (in mm) is a combination of both hinge angles, and therefore depends on the relative size of each angle.

- +X and -Y will bring the door up
- -X and +Y will bring the door down

Any combination of +X and +Y or -X and -Y will result in a Door Rise curve in between those two extremes.