

EZSLAMX

Training Program



CHAPTER 10

Database Management



STS110, Slide 1

Property of EZ Metrology © 2021. All rights reserved.

1

Database Management

- A. Introduction
- B. Selection
- C. Export
- D. Archive
- E. Import
- F. Delete
- G. Refresh
- H. Review



STS110, Slide 2

Property of EZ Metrology © 2021. All rights reserved.

2

A. Introduction



3

A. Introduction


1. Database

Database in EZSlamX

Recall, the Database window is where the user can select and open any available Session that is imported in the EZSlam software.

The Database Table will also offer pieces of information regarding the Session details, and, typically, the minimum closing speed of any completed and processed Sessions.

Selected	Processed	Real	Global	Date	Name	Version	Minimum Closing Speed
☒	☒	☒	☒	2021-01-15	EZSlam Sample Data V1.0	1.1.0.0	100
☒	☒	☒	☒	2021-01-15	EZSlam Sample Data V1.0	1.1.0.0	625
☒	☒	☒	☒	2021-01-15	EZSlam Sample Data V1.0	1.1.0.0	750
☒	☒	☒	☒	2021-01-15	EZSlam Sample Data V1.0	1.1.0.0	800

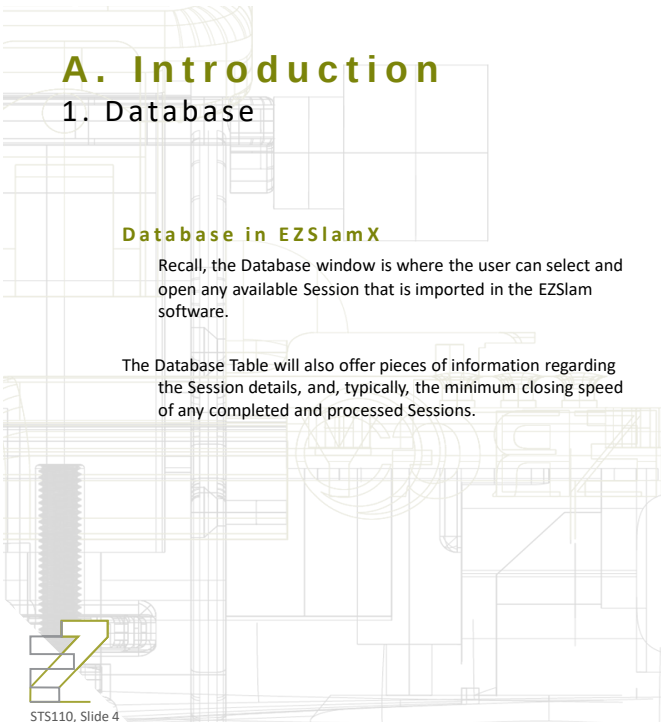

4

B. Selection



5


B. Selection

1. Database Window

Selecting Individual Sessions

As many sessions as desired can be selected from the database window by checking the box next to the session.

Selected	Processed	Eval	Client	Date	Name	Version	Minimum Chasing Speed
☒	☒	☒	2021 01 13		EZM_Sample_Data_18	3.1.3.0	610
☐	☐	☐	2021 01 15		EZM_Sample_Data_FR_01	3.1.3.0	629
☐	☐	☐	2021 01 15		EZM_Sample_Data_FR_01	3.1.3.0	766
☐	☐	☐	2021 01 26		EZM_Sample_Data_FR_04	3.1.3.0	692

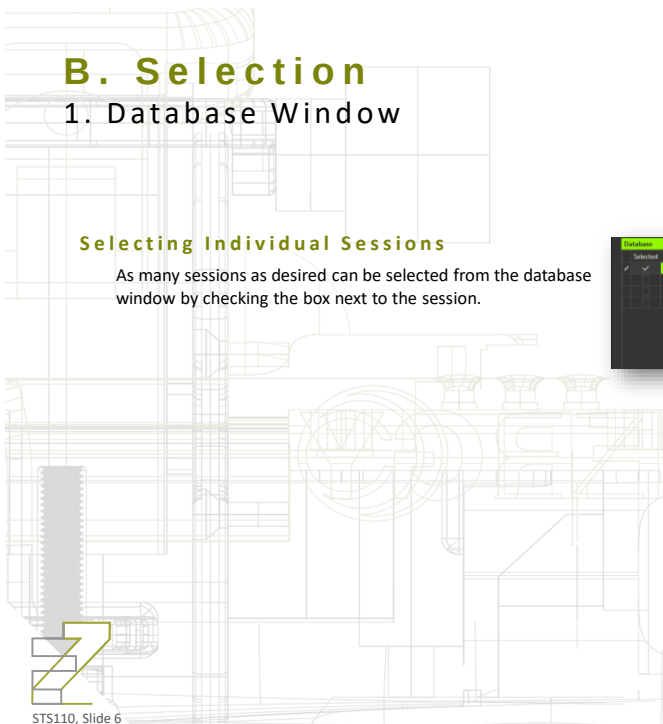

6

B. Selection

2. Drop-Down

Select All


From the Database tab of the Main Menu, clicking on the Selection icon will open a drop-down menu, enabling the user to select all the sessions in the database.

Invert Selection

Selecting invert selection will unselect any checked session and select any unchecked.

Clear Selection

Selecting Clear Selection will deselect all sessions.

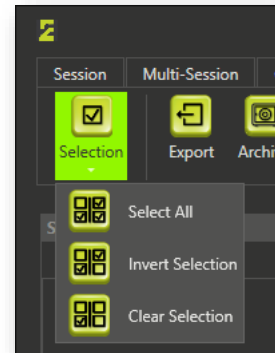

STS110, Slide 7

Property of EZ Metrology © 2021. All rights reserved.

7

C. Export

STS110, Slide 8

Property of EZ Metrology © 2021. All rights reserved.

8

C. Export



1. Exporting Sessions

Export

The export function will export selected sessions to one .zip archive. The sessions will remain in the EZSlam Database. Once the sessions to be exported have been selected, select Export from the Database Tab of the Main Menu.

Name Export

All the selected sessions will be exported together in one zip file, and the user will have the option to name the archive. It is recommended to name the archive in a way that describes the contents.

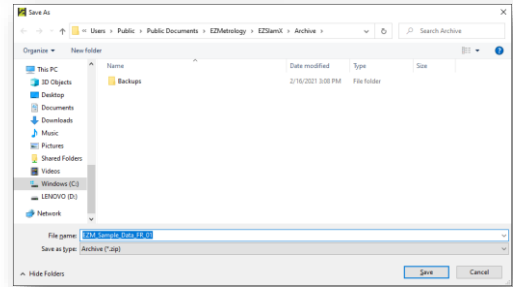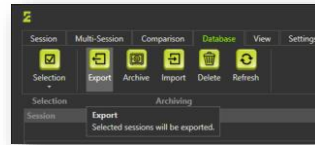

STS110, Slide 9

Property of EZ Metrology © 2021. All rights reserved.

D. Archive

STS110, Slide 10

Property of EZ Metrology © 2021. All rights reserved.

D. Archive



1. Archiving Sessions

Archive

The Archive function will export selected sessions to one .zip archive. The sessions will be removed from the EZSlam database. Once the sessions to be archived have been selected, select Archive from the Database Tab of the Main Menu.

Name Archive

All the selected sessions will be exported together in one zip file, and the user will have the option to name the archive. It is recommended to name the archive in a way that describes the contents.

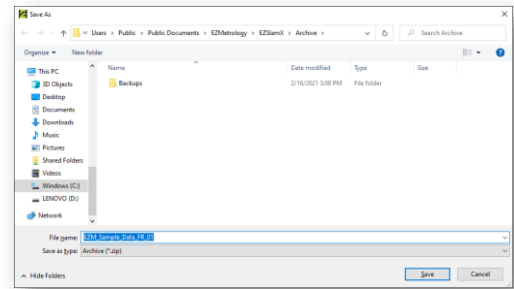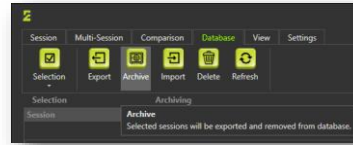

STS110, Slide 11

Property of EZ Metrology © 2021. All rights reserved.

11

E. Import

STS110, Slide 12

Property of EZ Metrology © 2021. All rights reserved.



12

E. Import

1. Importing Sessions

Import

The Import function will import selected archives into the database. Click on the Import Icon in the Database tab of the Main Menu. A pop-up window will appear, and the user can select the archives to import.

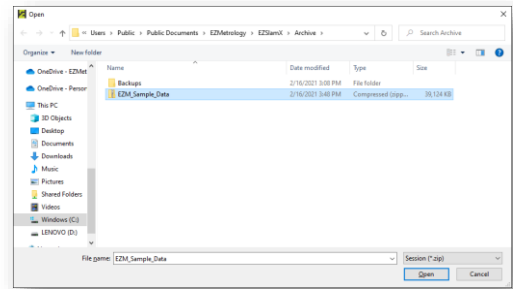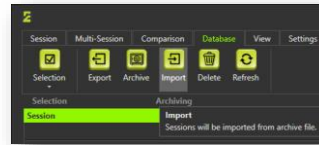

STS110, Slide 13

Property of EZ Metrology © 2021. All rights reserved.

13

F. Delete

STS110, Slide 14

Property of EZ Metrology © 2021. All rights reserved.

14


F. Deleting Sessions

1. Deleting Sessions

Delete

The Delete function will delete selected sessions from the database. This cannot be undone.

Once the sessions to be deleted have been selected, click on the Delete icon in the Database tab of the Main Menu.

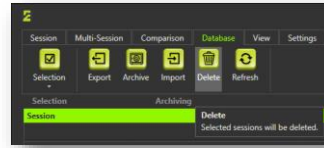

STS110, Slide 15

Property of EZ Metrology © 2021. All rights reserved.

15

G. Refresh

STS110, Slide 16

Property of EZ Metrology © 2021. All rights reserved.

16


Refresh

1. Refreshing the database

Rescan the Database

The refresh function will rescan the Data folder for any changes.

This is useful if sessions have been deleted or added without using the software functions.

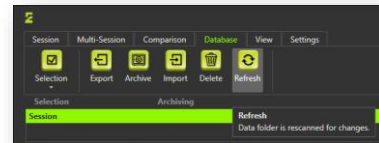

STS110, Slide 17

Property of EZ Metrology © 2021. All rights reserved.

17

H. Review

STS110, Slide 18

Property of EZ Metrology © 2021. All rights reserved.

18

H. Review

1. Chapter 10

Topics addressed during this chapter:

Database Management

- Select sessions using the database window and the database tab
- Export Sessions
- Archive Sessions
- Import Sessions
- Delete Sessions
- Refresh the database



STS110, Slide 19

Property of EZ Metrology © 2021. All rights reserved.