

PLS

INSTALLATION/SOFTWARE/USAGE

Q: Question:



How to import profiles in PLS?

A: Answer:

Please follow the steps below to import profile into the PLS Software.

First, run PLS Wizard located on your desktop. The temporary password will be sent to you by EZMetrology team.


PLS Wizard Icon

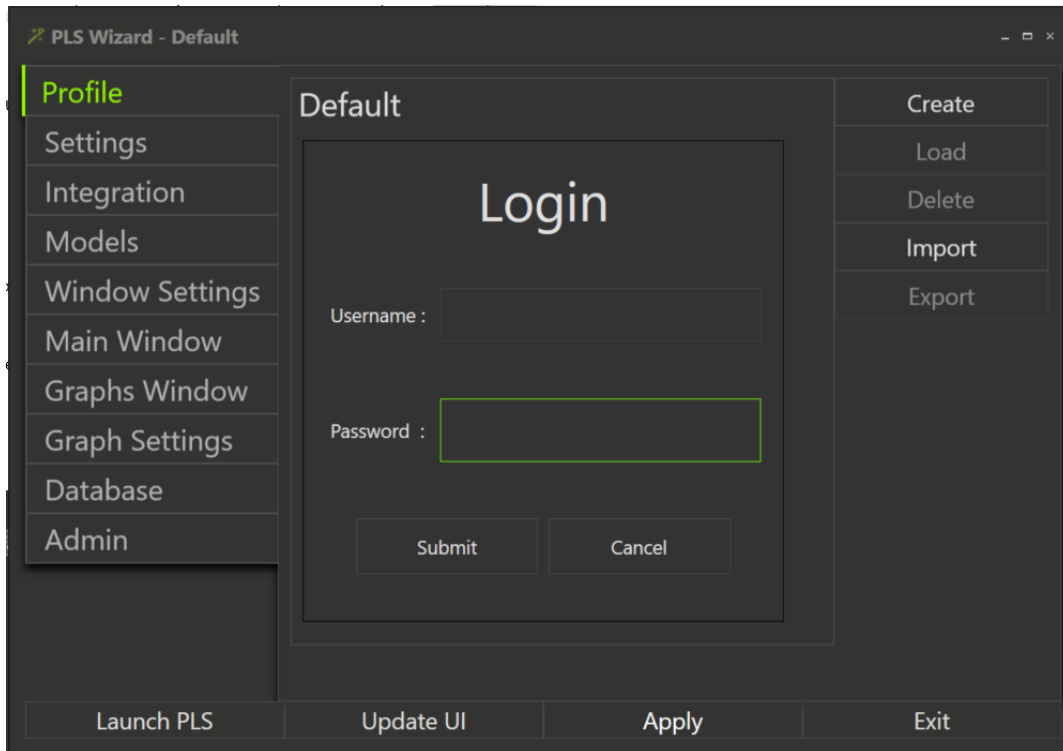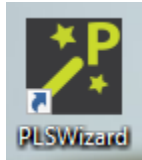

PLS Wizard Password Page




Navigate to the “Profile” tab and click “Import”. A new window will pop-up to select the .zip file for the profile to be imported “###_profile.zip file.”

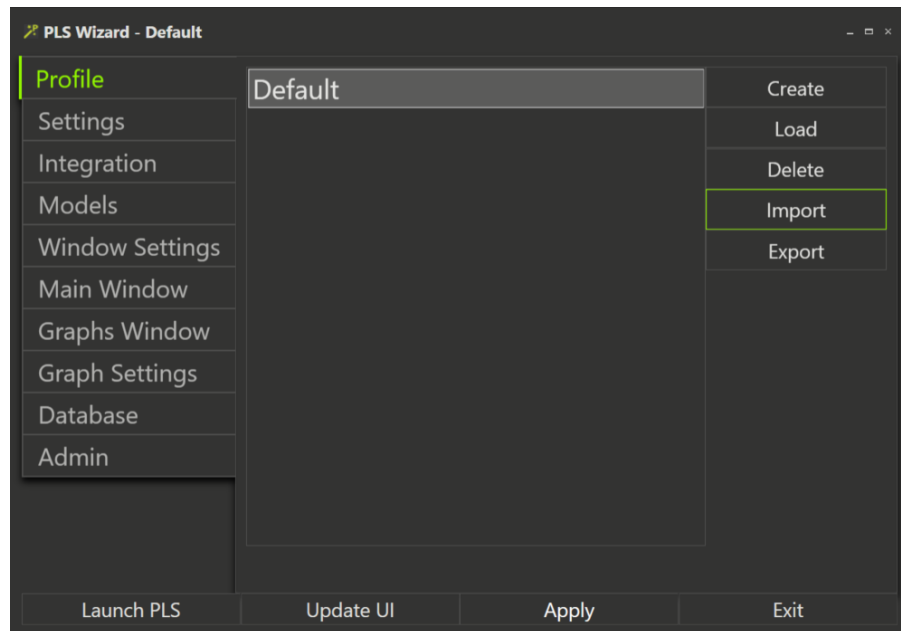


Download Center Main Page

After selecting the profile file, the window below will pop-up. It is important to select all off the items to completely import all settings. It is also required to create a new name for your profile.

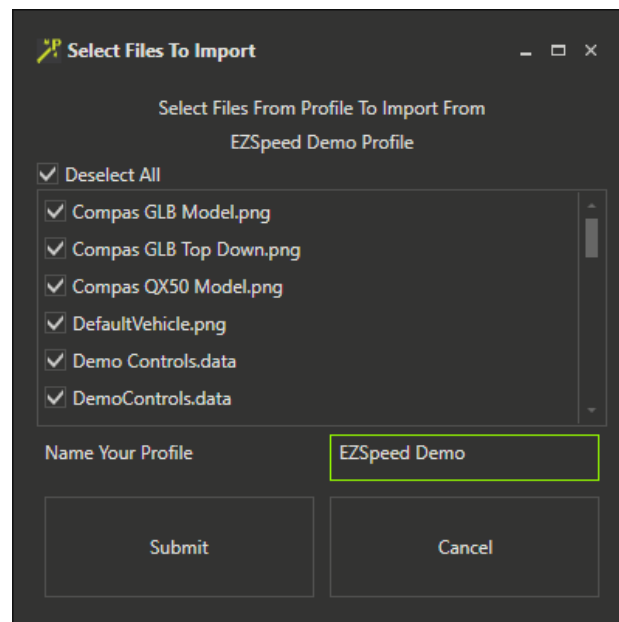

PLS Select Files

When it is finished, click “Submit” icon. The new profile is imported and ready for use.

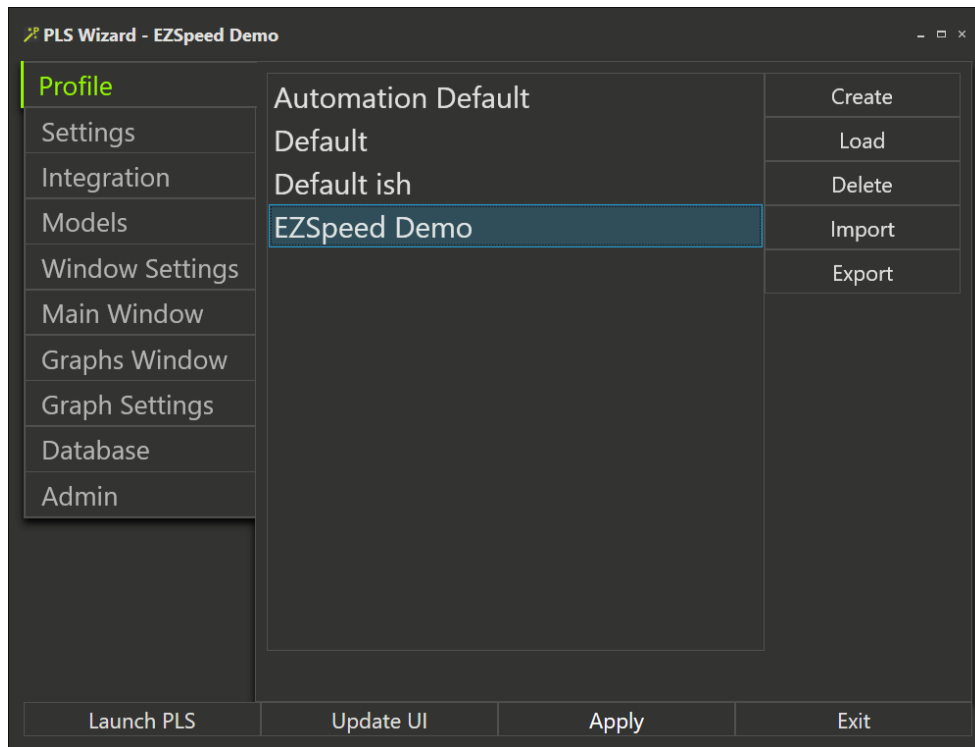

PLS Profile Import

Now, PLS is ready to start with the new profile. Click on the “PLS” icon on your desktop. The new UI will be applied to the PLS.



New PLS Window