

SpeedPod


INSTALLATION/SOFTWARE/USAGE

Question

How do I put SpeedPod in Deep Sleep (storage) mode?

Answer

The benefit of putting SpeedPod into Deep Sleep is to preserve battery while storing the device. To put the device in Deep Sleep mode, open MyPod software and connect the device. To connect a device, click the Connect button on the left of the Device ribbon bar tab (red highlight, below) to open the device list. Find the device and double click to connect:

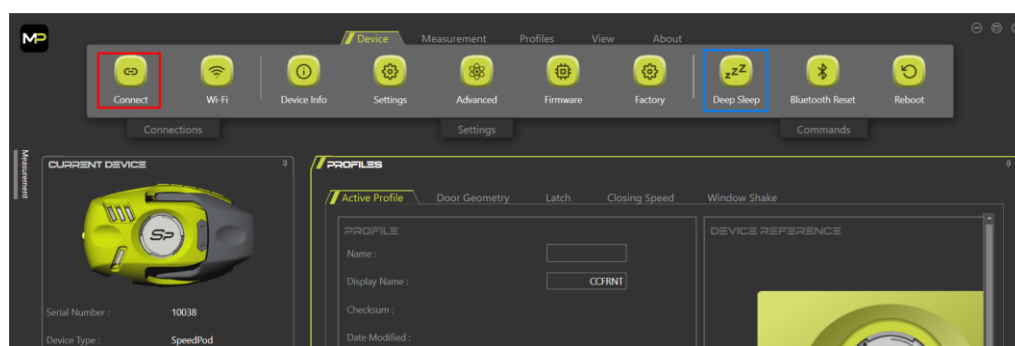

A connected device will enable the buttons on the right side of the Device ribbon bar. Select the Deep Sleep button (Blue highlight) to start the sleep process on the device. It will take a few seconds for the device to go to sleep. A new screen will be displayed indicating the device needs power to be awoken.



To **wake up** a device after being put into Deep Sleep simply connect it to the charging dock or power it through USB.