

SpeedPod/PLS

INSTALLATION/SOFTWARE/USAGE

Q: Question

How to connect a SpeedPod to PLS?


A: Answer

Before attempting to connect your SpeedPod device to PLS, you should be aware of your device's serial number to connect the correct device. The serial number is located on the back of the device, underneath the silicon cover.

For example:




Open the PLS program click on the gray Bluetooth icon.(Figure 1)

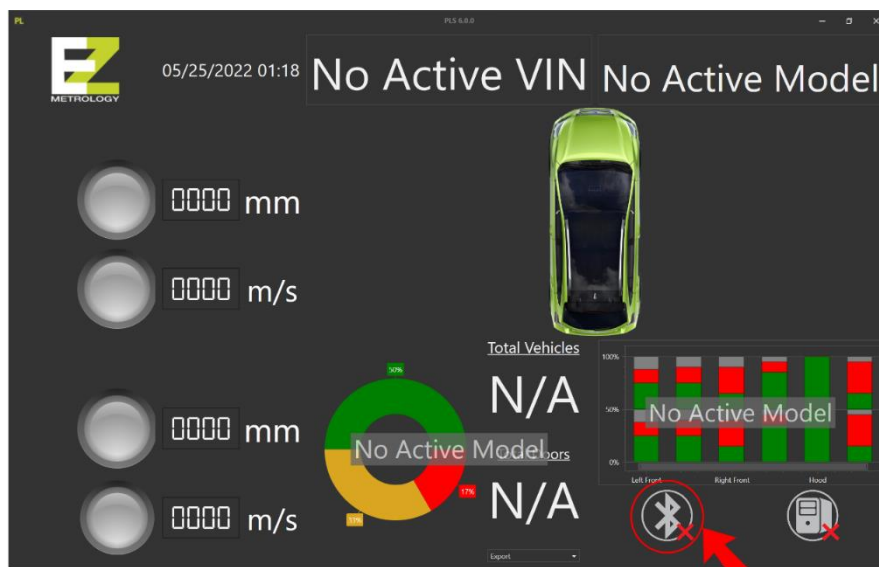



The Settings window will open, and you will click the 'Bluetooth scan' option to find and connect your SpeedPod device.

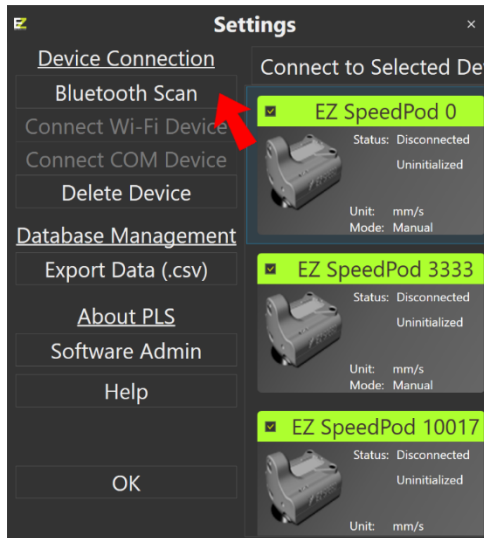

Double click on your SpeedPod and if the connection worked properly, the status should say 'Connected'. Additionally, the gray Bluetooth sign should have turned green. Try again if the device does not connect the first time.

If a device disconnects unexpectedly, after being connected to PLS, the software will attempt to reconnect to the device every 30 seconds.

