



SpeedPod

INSTALLATION/SOFTWARE/USAGE


Q: Question

What is the Universal Hinge Module for SpeedPod?

A: Answer

Universal Hinge Module is a purchasable option for the SpeedPod measurement device. SpeedPod, in its base configuration, only measures rotation speed of doors with a vertical hinge. If Universal Hinge Module is added to SpeedPod then hinged doors in any orientation can be measured. The modules available on the SpeedPod can be seen in MyPod configuration software by clicking on the Device Info button in the Device tab of the top action bar.

Device Info screen with Universal Hinge Module activated.

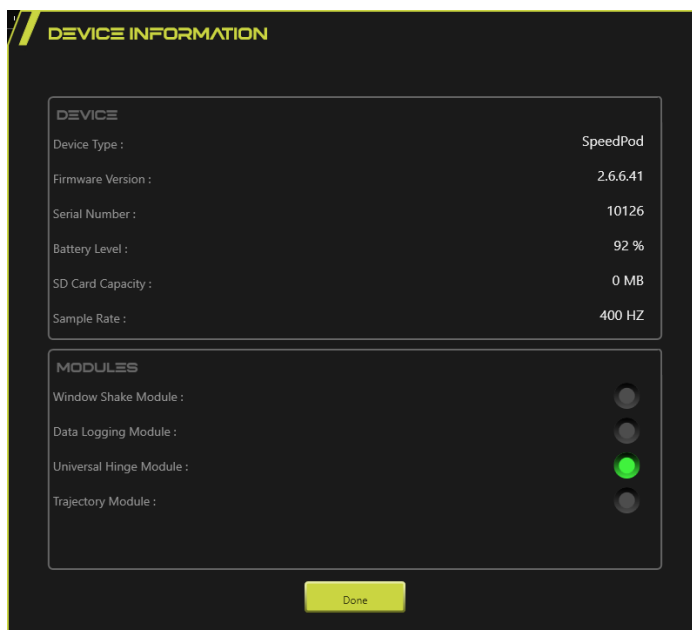

With Universal Hinge Module activated, an option in the Profile Settings is added. In the Door Geometry tab, there is a “Hinge Type Selection” option that has the Non-Vertical Hinge option added. Selecting this option for the profile will allow measurement of non-vertical hinged doors such as a trunk, hood, liftgate, etc.

